



Handling Tips Presswood Pallets

1.) Set-up forks of Forklift truck

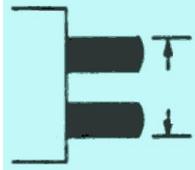

Adjust the width of the forks to 56 cm.
With smaller types of Presswood Pallets adjust individually.

5.) Block stacking

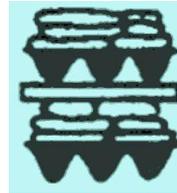


If Presswood pallets Loaded with soft goods (bags/sacks etc) are required to be block-stacked Then use separators or layer boards to protect the load underneath.

2.) Storage



Presswood pallets save a lot of valuable storage space – before and after use. While the pallets are weather-proof, their low moisture content, low tare weight and performance will be maintained if they are stored undercover. If the pallets have to be stored outside they are best covered - plastic bags can be ordered in advance.

6.) Off-load pallets evenly

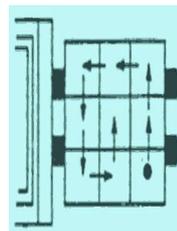

Please note, that when you off-load the pallets from a Vehicle, it is best done like any other kind of pallet. Unload the pallets evenly from the lorry/container to avoid instability.

3.) De-stacking Pallets




You can de-stack Presswood Pallets easily at any time. First tilt the Forklift Truck mast forwards, then enter the forks at the point of separation to lift the pallets.

7.) Abuse



To insure personnel Safety, persons should not be on the pallet during transport/lifting the forklift.

4.) Moving and Lifting

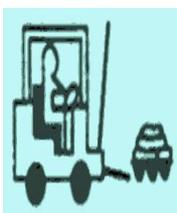

Presswood pallets do not have bottom runners, which allows free access for Forklift Trucks; Electric Trucks and Hand Pallet Trucks. Simply approach the pallet with the pallet with the forks lowered; lift vertically; and move off ensuring that the pallet feet do not rub along the floor.

8.) Environment



Presswood pallets are environmentally friendly. Not only are the pallets produced from recycled wood, they also can be re-produced to a new Presswood pallet, when they are damaged after use.